

# MICRO-NANO BUBBLE GENERATOR ASG2

## OPERATING MANUAL



### **ASUPU CO., LTD.**

- 1033 Shimotogari, Nagaizumi-cho, Suntou-gun, Shizuoka, JAPAN  
411-0943
- TEL (81)55-989-7704
- FAX (81)55-988-6221
- E-MAIL [info@asupu.com](mailto:info@asupu.com)
- URL <http://www.asupu.com>



## Contents

Caution .....	2
Connecting hoses and pouring prime water .....	3
Standard setting position .....	4
How to connect hoses to the machine .....	4
Air vent .....	5
Operation .....	5
On/Off Switch .....	5
Adjusting flow of air intake .....	5
Suction valve .....	6
Specifications .....	6

## Caution

1. After connecting ground and plug in, please confirm the operation of short protection breaker and auto shut-off function. This should be repeated monthly to make sure the safe operation.

Plug in

Depress reset button -> Power on

Depress test button -> Power off

Depress reset button again -> Power on

Give machine vibration or tilt the machine more than 50 degree Machine should be turned off. (If not, contact us)

Depress reset button to operate.

2. Please DO NOT disassemble the machine. Use original parts if replacement is needed.
3. Make sure NOT to use loose electrical outlet.
4. Make sure to connect the ground wire attached to the plug.


Plug with safety protection (Test and Reset buttons)



## Connecting hoses and pouring prime water

1. Place the machine in horizontal secure place.
2. Connect both inlet and outlet hoses as marked.
3. Pour 1-2 litter of water from inlet hose.
4. Pouring prime water may be needed when you relocate the machine.


Outlet hose (left) Intake hose (right)

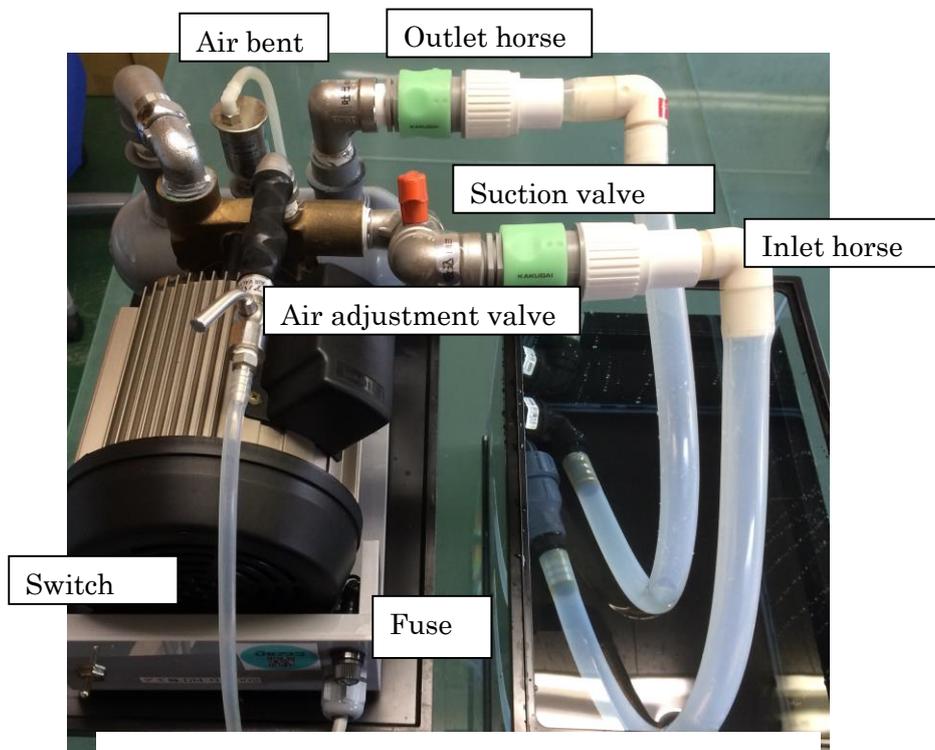

The hoses are connected to the right places.

## Standard setting position

Water line should be 10-30cm under machine.  
Install the machine on flat place.  
Horses should be connected firmly.

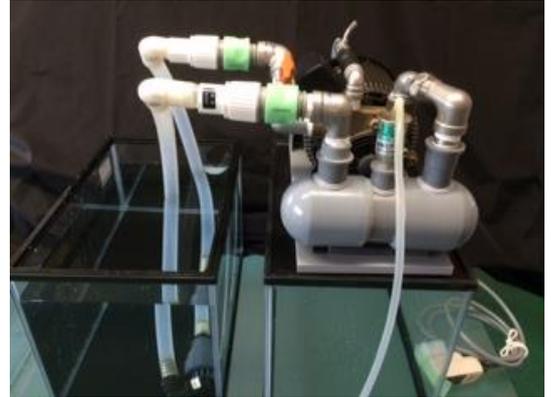

## How to connect horses to the machine

Pull light green cover and connect. See pictures below.



Release the light green cover after push to the end.



○ Good

4



× Bad

Air vent



Operation

1. Make sure the machine is set on secure place.
2. Make sure the reset button is depressed (warning light is off) and ground wire is connected.
3. Make sure the hoses are connected to the right place.
4. Make sure there is enough prime water in the machine.
5. Turn the switch on for continuous operation.

Note:

Do not lift inlet hose from water surface during the operation.

Do not remove the nozzle.

On/Off Switch

Up (ON)


Down (OFF)



Sometime water come out from air vent while. It is not unusual.

Adjusting flow of air intake

It is adjusted at 45 degree when we dispatch the factory. Please find the best position while watching bubbles generated.

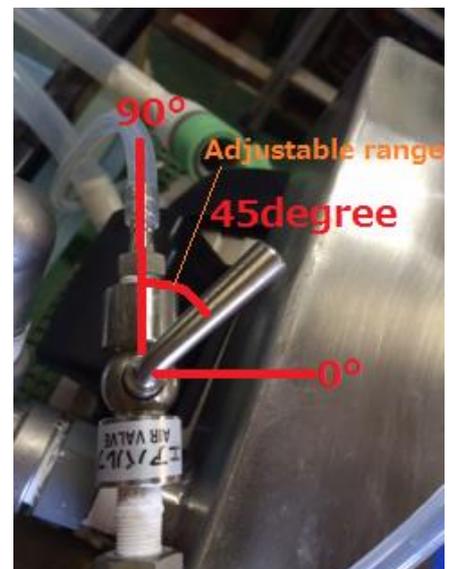

## Suction valve

Suction valve(orange one in the picture below on ): It should be always open while operating. It is shut 45 degree or less when the machine is installed under the water line to reduce falling pressure of water as keep amount of air intake.



## Specifications

MODEL	ASG2
DISCHARGE AMOUNT L/min.	7.5~9.0
TOTAL WEIGHT kg	12.5
POWER SUPPLY V	AC100
POWER CONSUMPTION W	490
DIMENSIONS H×W×D mm	385×225×230



For any other malfunctions please contact Asupu service department.

Repair must only be carried out by Asupu or specialist dealers authorized by Asupu.

## Service/Warranty

Asupu guarantees this product for 1 year (from the date of shipping).

This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults.

Under warranty we will either replace the unit or repair it for free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser nor a non-authorized third party have attempted to repair the unit.

As a wear pump and motor parts such as the impeller, mechanical seal, and others is not covered by the guarantee.

If a fault occurs with your micro nano bubble generator, please return the faulty unit together with a description of the fault, with postage paid to Asupu or one of the Asupu authorized dealer.



■ **1033 Shimotogari, Nagaizumi-cho, Suntou-gun, Shizuoka, JAPAN 411-0943**

■ ☎(81)55-989-7704 📠(81)55-988-6221

■ URL : <http://www.asupu.com>

■ E-mail: [info@asupu.com](mailto:info@asupu.com)

